


| | | |
|---|--|---------------------------|
|  <p>OLIVIER BIODEFENSE</p> | <p>Sentry Unit UV Bulb Replacement Procedure</p> | Document No.: OB-03 |
| | | Revision Status: 0 |
| | | Date of Issue: 11/16/2020 |

UV Light Replacement Procedure

for the Synexis Sentry DHP Unit

DOCUMENT No. OB-03
REVISION No. 0

| Revision# | Description of Revisions | Authored/Revised By | Date of Issue |
|-----------|--------------------------|---------------------|---------------|
| 0 | Initial Issue | Jonathan Chauvin | 11/16/2020 |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |




Scope

This procedure details the process of replacing the UV lights in the Synexis Sentry units.

Tools Needed

Phillips head screwdriver

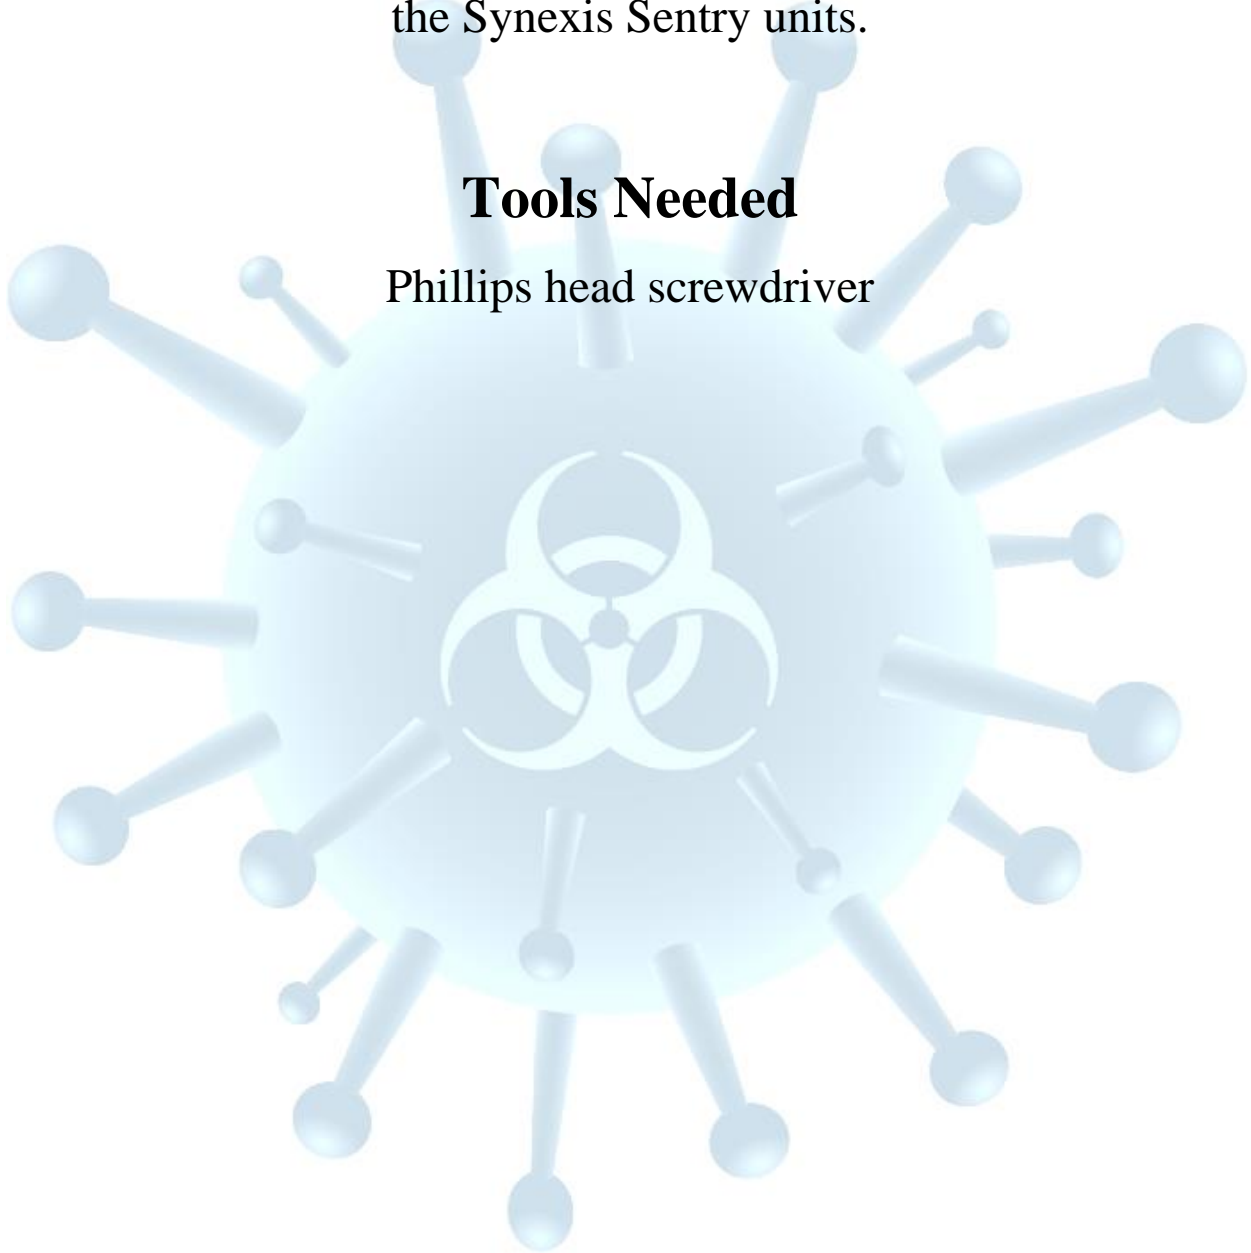


Steps

1. Turn the switch off and unplug the device.
2. Rotate the access plate latch 90 degrees counterclockwise. Then grasp the handle near the top of the front panel and pull it outward from the unit.



3. Remove the Sail and put it in a safe place, then remove the two Phillips head screws circled in red in the photo below, and remove the mounting plate.

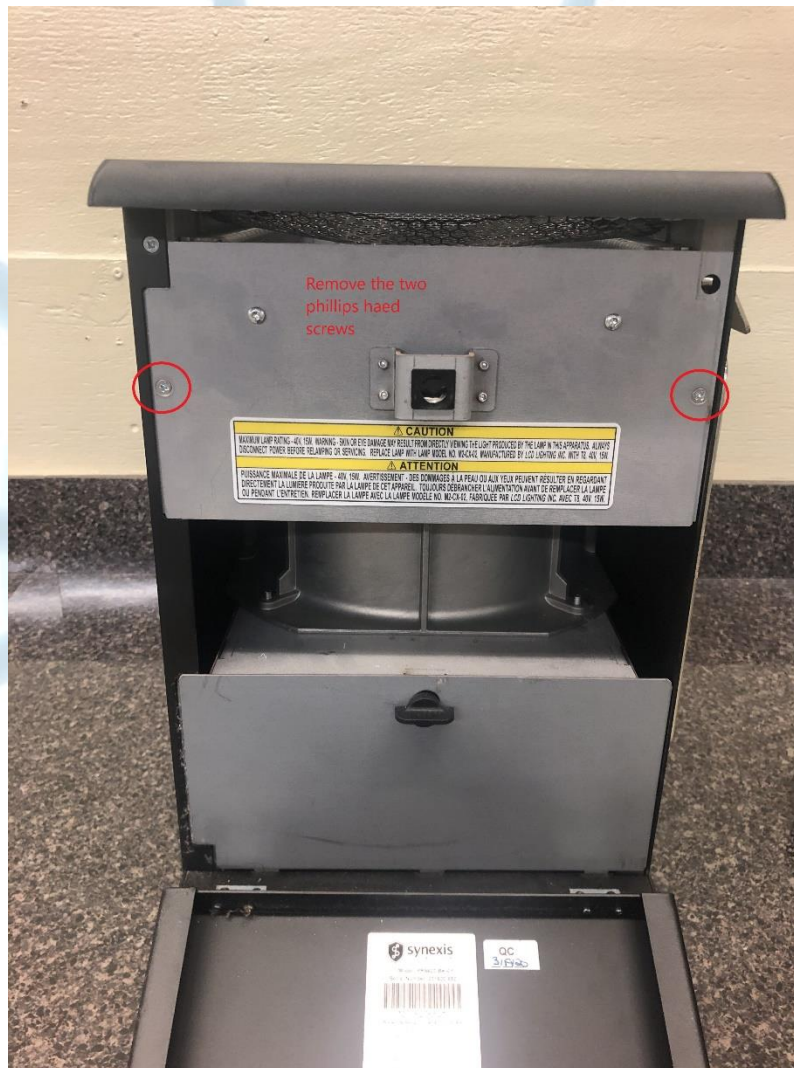

4. Remove the old UV bulb by pulling it straight out.



5. To install the new bulb, make sure the writing on the end of the bulb faces up and insert it into the housing. Do not force the bulb in.





6. At this time, you can plug the unit in, close the side door, and turn it on to ensure the new bulbs are working. Then turn the unit off and unplug it again.
7. If the new bulbs do not turn on, please contact Olivier Biodefense at Operations@olivierbiodefense.com
8. Reinstall the mounting plate. You may need to place the unit on its side to align the bulbs with the holes in the mounting plate. Be sure the unit is unplugged before placing it on its side.
9. Reinstall the two Phillips head screws in the mounting plate.
10. Reinstall the Sail, close and latch the side door and return the unit to service.